



**why**  
*L'originale*



## PROCEDURE DUPLICAZIONE

### CODICI FISSI



tenere premuto il tasto 1  
e contemporaneamente  
premere 4 volte il tasto 2



il led lampeggia  
ogni 2 sec.



premere il tasto  
da copiare



il led lampeggia  
veloce



premere il tasto  
in cui si desidera  
memorizzare il codice



**PROCEDURA INSERIMENTO  
IN RICEVENTE**

FUNZIONAMENTO  
DIRETTO



## MULTIFREQUENZA

Codici fissi e Rolling code

PER VIDEO TUTORIAL, ISTRUZIONI  
COMPLETE E LISTA DI  
COMPATIBILITÀ AGGIORNATA  
Visita il nostro sito [why-evo.com](http://why-evo.com)



WHY EVO

Accessorio disponibile su richiesta

**why** visor clip  
cod. 8999966



AUTOAPPRENDIMENTO  
E PROGRAMMABILE CON  
**why** | touch-pro

## WHY EVO

Cod. 4791010 LICORICE BLACK



Cod. 4791011 MAGNOLIA WHITE



Cod. 4791012 GRANADE RED



Cod. 4791013 SKY BLUE




Posizione migliore  
per la duplicazione



1 - 3 cm

## ROLLING SIMPLE

\*consultare la lista di compatibilità

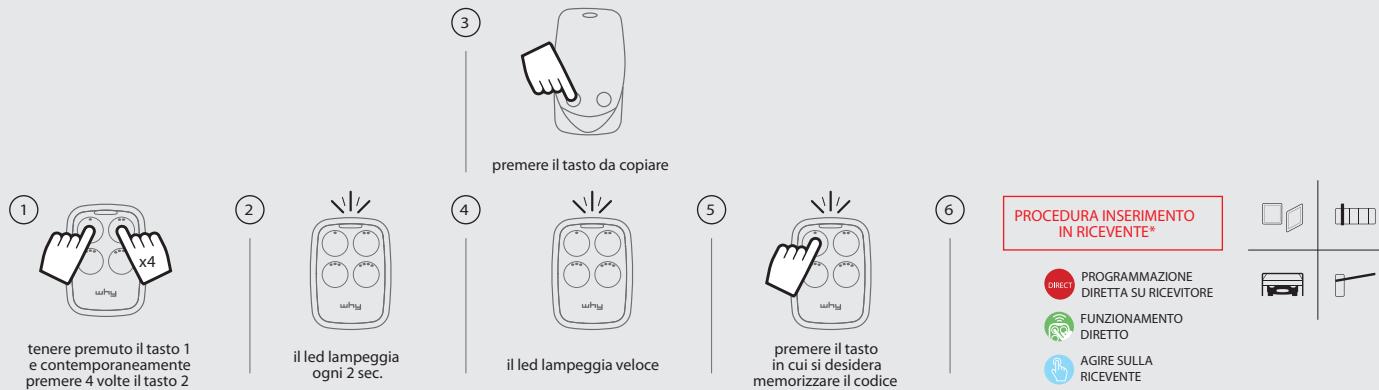


## ROLLING COMPLEX (BFT MITTO)



## ROLLING COMPLEX (FAAC/GENIUS)

ATTENZIONE: VERIFICARE CHE IL RADIOCOMANDO DA COPIARE SIA UN MASTER.  
Premendo un tasto qualsiasi, il led deve emettere un doppio lampeggio anziché accendersi subito a luce fissa.

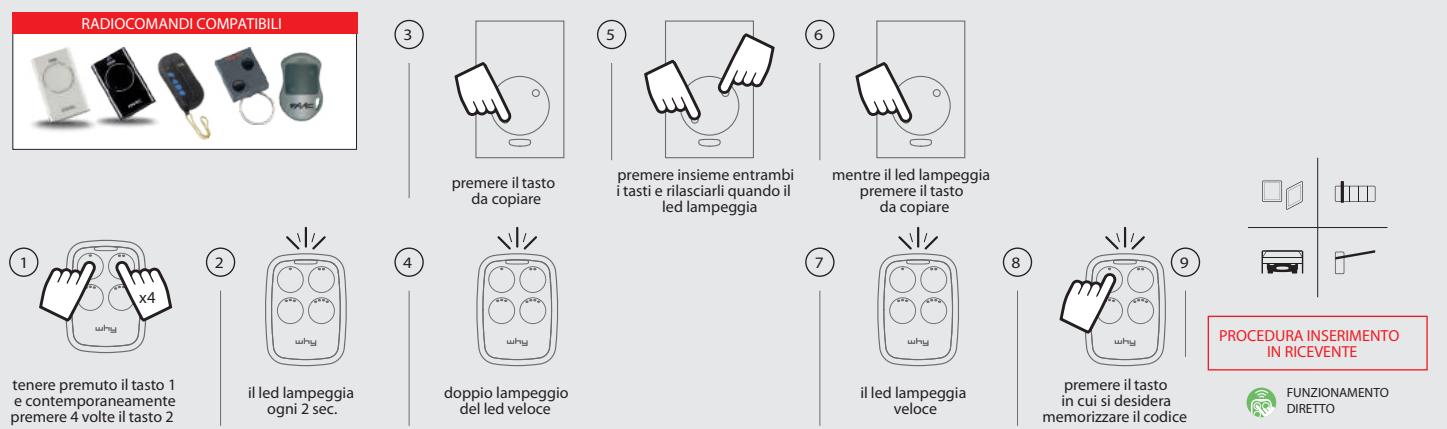

## ROLLING COMPLEX (AVIDSEN/V2)




## WHY EVO ---> WHY EVO

Se il codice presente è un CODICE FISSO O ROLLING SIMPLE



Se il codice presente è un ROLLING COMPLEX

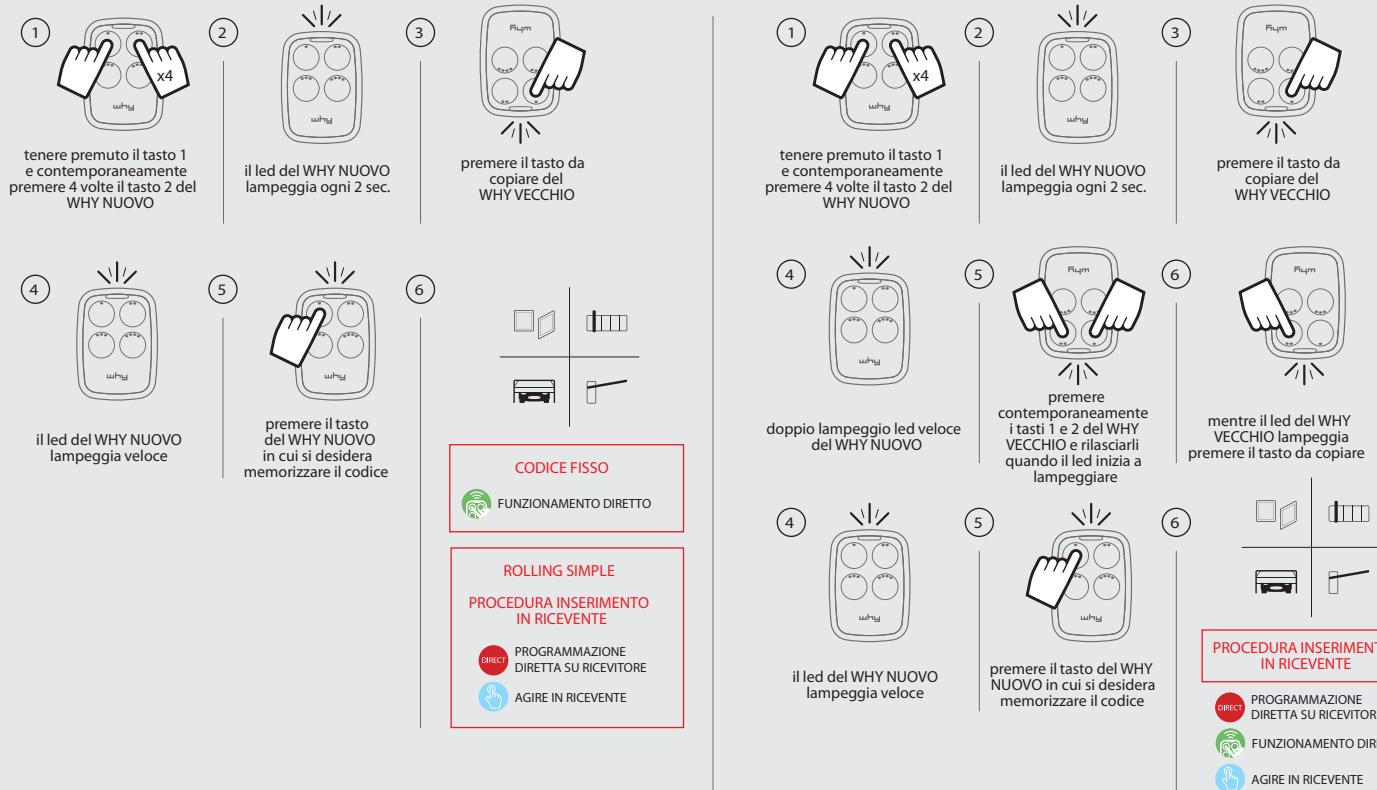

# LISTA COMPATIBILITÀ WHY EVO

## Legenda:

 PROGRAMMAZIONE  
DIRETTA SU RICEVITORE

 AGIRE SULLA RICEVENTE

 FUNZIONAMENTO DIRETTO

ACM TX2, TX2 COLOR, TX4		CLEMSA Attenzione! Codice Fisso MASTERCODE MV		KLING KUA, KUA E, KUA S		SECOLUX NEO	
ADYX TE4433H BLUE, 433-HG BRAVO		DASPI ZERO RC		LABEL SPYCO		SILVELOX MHz 2007, QUARZ SAW	
AERF COMPACT, HY-DOM, MERCURI B, MERCURI C, SABOTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH		DEA SYSTEM PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2M, MIO TR, GT2M, TRN		LIFE FIDO		SIMINOR CVXNL, MITTO	
ALLMATIC BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3, FOR4		DITEC/ENTREMATIC BIXLP, GOL4, BIXLG, ZEN		MHOUSE TX3, TX4, GTX4		SIMINOR SIM433	
APERIO GO, GO PRO, GO MINI		DOORHAN TRANSMITTER 4		MOOVO MT4G		SOMFY K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA	
APERTO (Sommer) 4020-TX03-434, TX02-434-2, TX02-868-2		ECOSTAR RSC, RSE, RSZ		NICE SMILO, FLOR-S, VERY-VR, FLOR-S ERA, ONE (ON), ON ERA, INTI, ERGO, PLANO, ONE (ON FM)		SOMMER 4010, 4011, 4014 TX03-434-2, 4013 TX03-434-4, 4020 TX03-868-4, 4026 TX03-868-2, 4022 TX02-434-2, 4025 TX02-868-2, 4031 TX08-868-4	
APRIMATIC TR, TM4, TXM		ERREKA IRIS, ROLLER 2, ROLLER 433, ROLLER 868, SOL433, SOL868, VEGA 433, VEGA 868		NORMSTHAL RCU 2/4 K, EA 433 2/4 K		STAGNOLI KALLISTO, VENUS AV223	
AVIDSEN 104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250, TX4 114253		FAAC TML 433SLH, DL 86 8 SLH, XT 868 SLH, XT 433 SLH, T 868 SLH, T 433 SLH, XT 868 SLH BLACK, XT 433 SLH BLACK		NORTON GO NORTON, GO MINI NORTON		TAU 250K-SLIMRP, 250K-SLIMR, 250T-4RP	
BALLAN FM400, FM400E		FAAC XT 433 RC, TE433HG, XT4 433 RCBE		NOVOFERM MCHS, MICRO-NOVOTRON 502, MINI-NOVOTRON 504, MICRO-NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI- NOVOTRON 50, MNHS, MINI NOVOTRON 522		TELCOMA FM400E, FM400	
BENINCA TO, GO, WV, TWV, ROLLKEY, APPLE, LOT WCV, CUPIDO, TO.GO, QV, HAPPY VA, TO.GO, VA		FADINI JUBI-SMALL, JUBI 433, DIVO 71/4		O&O TX, T.COM R4-2, T.COM R8-2, TWIN, TX (NEO)		TOR LIFT TORMIT4	
BENINCA IO		GENIUS AMIGO JA332-JA334 868, AMIGOLD 868, KILO 433 JLC, KILO 868 JLC		PRASTEL MTE, MPSTLE, MPSTP2E, TCE, BFOR, TRQ-P, SLIM-E		V2 TSC, TXC, TRC, HANDY, PHOENIX, PHOX 433, PHOENIX 868, PHOX 868	
BFT MITTO, MITTO M, MITTO RCB, MITTO A, TRC, GHIBLI, MURALE, KLEIO		GENIUS BRAVO, ECHO		PUJOL TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO		VDS ECO-R, TRQ P	
CARDIN TRQ S449, TRQ S449 GREEN (PRECODE), TXQ S449, TXQ S449 GREEN, TRQ S486, TXQ S486, S437 TX, XRADO		GIBIDI AU1600, AU1600 WOOD , AU1680, AU1680 WOOD, DOMINO, MAKO		RIB LITHIO		PROGRAMMAZIONE DIRETTA SU RICEVITORE	
CASALI GENIUS/CASALI A252RC		JCM GO, GO PORTIS, GO NORTON, GO MINI		ROPER GO ROPER, GO MINI ROPER		In prossimità dell'automazione e prima di aver utilizzato il telecomando originale, premere e mantenere premuto il tasto del telecomando WHY EVO fino a quando il led inizierà a lampeggiare. Attendere la fine del lampeggiato.	
CHAMBERLAIN/LIFT MASTER/MOTOR LIFT 953ESTD, 371 LM, 971 LM, 84330E, 94334CE, 94333E/94334E/94335E, 9747E, 1A5639-7 .1A5477, 1A6487, 13282372, 94330EM - L/9333EML/94335EML, 84330EML/84333EM L/84335EML, 8747EML		KBLUE ETH-TEL01		SABUTOM BROOVER, BROSTAR		AGIRE IN RICEVENTE	
CLEMSA MUTANCODE, T, T-8, E-CODE N		KEY 900TXB-42R, TXB 44R, SUB 44R		SEA HEAD 433, HEAD 868, SMART DUAL COPY		In prossimità dell'automazione e prima di aver utilizzato il telecomando originale, premere e rilasciare il tasto PNL o PGW presente in ricevente, di seguito premere il tasto del telecomando WHY EVO.	
CLEMSA CLIPPER, STYLO		KING GATES		SEAV BE HAPPY RS, BE SMART		<b>FUNZIONAMENTO DIRETTO</b>	
						In prossimità dell'automazione e prima di aver utilizzato il telecomando originale, premere il tasto del telecomando WHY EVO 4/5 volte.	



**why** licorice black  
cod. 4791010



3 863349 213145



**why** magnolia white  
cod. 4791011



3 863349 213152



**why** granade red  
cod. 4791012



3 863349 213169



**why** sky blue  
cod. 4791013



3 863349 213176

BEST POSITION FOR THE DUPLICATION



**IT IS RECOMMENDED:**

TO REALIZE A CORRECT DUPLICATION OF THE REMOTE CONTROLS, WE RECOMMEND TO FOLLOW THE PROCEDURES HERE BELOW TAKING CARE TO DISTANCE YOURSELF BY TOOL THAT CAN GENERATE FREQUENCY TROUBLES AS:

CORDLESS  
WI-FI VIDEO SURVEILLANCE DEVICES  
MOBILE PHONES, SMARTPHONES OR TABLETS  
WI-FI OR BLUETOOTH ACTIVED IN YOUR COMPUTERS  
ELECTRONIC MOTOR  
NEON LIGHTS  
WIRELESS DEVICES FOR BACK END MANAGEMENT IN THE BUSINESS STORES

1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED emits a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN) that confirms the correct learning of code. This step may take a few seconds.
5. While the GREEN LED is flashing, press the button of the "WHY EVO" where you want to program the code just learnt, and retain pressed until the LED switches off. This step may take some seconds.
6. The copy has been happened with success. Now check on the automation the correct functioning of the new WHY EVO remote control.

**Notes:**

- If the RED LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.

1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-2 cm of distance (as shown in the picture).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN) that confirms the correct learning of code. This step may take a few seconds.
5. While the GREEN LED is flashing, press the button of the "WHY EVO" where you want to program the code just learnt, and retain pressed until the LED will switch off.
6. The copy has been happened with success.
7. Activate now the correct procedure for the programmed model and insert the new remote control on the receiver (see the compatibility list present in this manual).

**Notes:**

- If the LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.

To activate the remote control on the receiver for models marked with  proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button during 10 seconds, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the other models: Refer you to the instructions of the original model.

**NOTE: THE SEED CODE OF THE WHY EVO CAM BE EMITTED AS HERE BELOW:**

1. Press the buttons 1 and 2 simultaneously for 8 seconds and release them when the LED start to flash;
2. While the LED is flashing press the button with the seed code needed.

ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".

BFT 



1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture).
4. Press and retain pressed the button to be programmed of the original remote control, till the RED LED will switch on as a fix light; now release the button.
5. The WHY EVO RED LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Transmit now the SEED CODE of the BFT original remote control, using a pin, press the rear hide button (see the picture) or, according to the new references, press the 1 and 2 buttons until the original remote control LED switches on. (see the picture)
7. Now the WHY EVO RED LED will change the flash mode (more fast) and a change of its color (GREEN), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the WHY EVO button when you want to store the code and retain pressed until the WHY EVO LED switches off.
9. Activate now the  procedure to insert the new remote control on the receiver.

V2   
433 - 868



1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture).
4. Press and retain pressed the button to be programmed of the original remote control, till the RED LED will switch on as a fix light; now release the button.
5. The WHY EVO LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Transmit now the SEED CODE of the V2 original remote control pressing at the same time 1 and 2 buttons.
7. Now the WHY EVO RED LED will change the flash mode (more fast) and a change of its color (GREEN), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the WHY EVO button when you want to store the code and retain pressed until the WHY EVO LED switches off.
9. Activate now the  procedure to insert the new remote control on the receiver.

**To activate the remote control on the receiver for models marked with  proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button during 10 seconds, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the other models: Refer you to the instructions of the original model.

**NOTE: THE SEED CODE OF THE WHY EVO CAN BE EMITTED AS HERE BELOW:**

1. Press the buttons 1 and 2 simultaneously for 8 seconds and release them when the LED start to flash;
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!!** Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".

**FAAC**  
433 - 868




**GENIUS**  
433 - 868



**Attention: verify the programming remote control is a MASTER.**  
**Pressing whatever button, the LED has to emit a double flash rather than to switch on as a fixed light.**

1. While pressing the button 1 of the "WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the WHY EVO RED LED will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance.
4. Press and retain pressed the button to be programmed of the original remote control, till the LED will switch on as a fix light; now release the button.
5. The WHY EVO RED LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
6. Predispose the FAAC/GENIUS remote control for the SEED CODE emission. Press at the same time the 1 and 2 buttons (note: THESE ARE THE BUTTONS OF THE DIAGONAL LINE as in the picture).

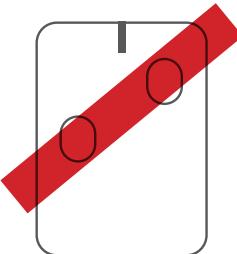

7. While FAAC/GENIUS remote control LED flashes, place it in front of WHY EVO at a distance of 1-3 cm and press the button to be programmed until the WHY EVO RED LED will change the flash mode (more fast) and a change of its color (GREEN), for a reconfirmation of the correct code learning. This step may take some seconds.
8. At this moment, press the button when you want to store the code and retain pressed until the WHY EVO GREEN LED, switches off.
9. The copy has been happened with success. Now check on the automation the correct functioning of new WHY EVO remote control pressing two times the copied button.

**Notes:**

- If the RED LED flashes only 3 times and switches off, the code has not learnt correctly. Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.

1. While pressing the button 1 of the "NEW WHY EVO", at the same time press 4 times the 2 button.
2. Release both buttons. Now the RED LED of "NEW WHY EVO" will emit a short flash every 2 seconds.
3. Place the "SOURCE WHY EVO" in front of the "NEW WHY EVO", at about 1-2 cm of distance (as in the picture 3 at the page 3).
4. Press and retain pressed the button to be programmed of the "SOURCE WHY EVO"

### NOW IF THE CODE IN THE "SOURCE WHY EVO"



**IS A FIXED  
OR ROLLING-SIMPLE CODE**



**IS A ROLLING-COMPLEX CODE**

- 5a** wait for a change flash (as a faster flash) of "NEW WHY EVO" RED LED and a change of its color (GREEN) that confirms the correct learning of code. This operation may take some seconds.
- 6a** While the GREEN LED is flashing, press the button of the "NEW WHY EVO" where you want to program the code just learnt, and retain pressed until the LED will switch off.
- 7a** The copy has been happened with success. Now check on the automation the correct functioning of NEW WHY EVO remote control pressing directly the button where the code has been programmed. If it will not work, please proceed with the insertion on the receiver of the NEW WHY EVO, through the function, if it is present, or through the procedures given by the automation manufacturer.
- 5b.** The WHY EVO RED LED will emit a short flash every 2 seconds. That it informs the user that, to duplicate the remote control, it is necessary to emit the SEED CODE to realize the copy.
- 6b.** Transmit now the SEED CODE of the "SOURCE WHY EVO" pressing at the same time 1 and 2 buttons for 3 seconds till the switch on of RED LED. While the LED is flashing, (within 10 seconds) pressing and retain pressed the button where you want to program the SEED CODE.
- 7b.** Now the RED LED of the "NEW WHY EVO" will change the flash (more fast) and color (GREEN) to confirm the correct learning of the code. This step may take some seconds.
- 8b.** At this moment, press the NEW WHY EVO button when you want to store the code and retain pressed until the WHY EVO GREEN LED, switches off.
- 9b.** The copy has been happened with success. Now check on the automation the correct functioning of NEW WHY EVO remote control pressing directly the button where the code has been programmed. If it will not work, please proceed with the insertion on the receiver of the NEW WHY EVO, through the function, if it is present, or through the procedures given by the automation manufacturer.

#### Notes:

- If the LED flashes only 3 times and switches off, the code has not learnt correctly.  
Please repeat the operation from the step 1.
- The WHY EVO memory is completely re-writable.
- To duplicate further buttons of WHY EVO, please repeat the operation from the step 1.

**TO MAINTAIN THE SAME SERIAL NUMBER OF A ROLLING REMOTE**

1. While pressing the button 2 of the WHY EVO, at the same time press 4 times the 1 button.
2. Release both buttons. Now the RED LED "WHY EVO" will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture at the page 3).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN).
5. Choice the button where you want to program the frequency and press it. This step may take some seconds.
6. The copy has been happened.
7. Activate now the correct procedure for the copied model and insert the new remote control on the receiver (see the compatibility list present in this manual).
8. Repeat this procedure for the other buttons, if necessary.

**PROGRAM A ROLLING CODE ON EACH BUTTON WITH A SERIAL NUMBER**

1. While pressing the button 4 of the WHY EVO, at the same time press 4 times the 1 button.
2. Release both buttons. Now the RED LED "WHY EVO" will emit a short flash every 2 seconds.
3. Place the original remote control to be programmed in front of the "WHY EVO", at about 1-3 cm of distance (as shown in the picture at the page 3).
4. Press and retain pressed the button of the original remote control and wait for a change flash (as a faster flash) of WHY EVO RED LED and a change of its color (GREEN).
5. Choice the button where you want to program the frequency and press it. This step may take some seconds.
6. The copy has been happened.
7. Activate now the correct procedure for the copied model and insert the new remote control on the receiver (see the compatibility list present in this manual).

**LEGEND:**

**WHY SYNC TECHNOLOGY**

**ACT ON THE RECEIVER**

**DIRECT FUNCTIONING**

<b>ACM</b> TX2, TX2 COLOR, TX4		<b>DITEC/ENTREMATIC</b> BIXLP, GOL4, BIXLG, ZEN		<b>NICE</b> SMILO, FLOR-S, VERY-VR, FLOR-S ERA, ONE (ON), ON ERA, INTI, ERGO, PLANO, ONE (ON FM)		<b>STAGNOLI</b> KALLISTO, VENUS AV223	
<b>ADYX</b> TE443H BLUE, 433-HG BRAVO		<b>DOORHAN</b> TRANSMITTER 4		<b>NORMSTHAL</b> RCU 2/4 K, EA 433 2/4 K		<b>TAU</b> 250K-SLIMRP, 250K-SLIMR, 250T-4RP	
<b>AERF</b> COMPACT, HY-DOM, MERCURI B, MERCURI C, SABUTON, MARS, SATURN, ST3/N, TERRA, TMP-1, TMP-2, UNITECH		<b>DOORMATIC</b> MILENY, MILENY-EVO		<b>NORTON</b> NEO, TXCD		<b>TELCOMA</b> FM400E, FM400	
<b>ALLMATIC</b> BROWN, BROWN RED, BRO.OVER, PASS, MINIPASS, TECH3, FOR4		<b>ECOSTAR</b> RSC, RSE, RSZ		<b>NORTON</b> GO NORTON, GO MINI NORTON		<b>TOR LIFT</b> TORMIT4	
<b>APERIO</b> GO, GO PRO, GO MINI		<b>ERREKA</b> IRIS, ROLLER 2, ROLLER 433, ROLLER 868, SOL433, SOL868, VEGA 433, VEGA 868		<b>NOVOFERM</b> MCHS, MICRO-NOVOTRON 502, MINI-NOVOTRON 504, MICRO-NOVOTRON 502, MICRO-NOVOTRON 504, MICRO-NOVOTRON 31, MICRO-NOVOTRON 51, MINI-NOVOTRON 30, MINI- NOVOTRON 50, MNHS, MINI NOVOTRON 522		<b>V2</b> TSC, TXC, TRC, HANDY, PHOENIX, PHOX 433, PHOENIX 868, PHOX 868	
<b>APERTO (Sommer)</b> 4020-TX03-434, TX02-434-2, TX02-868-2		<b>FAAC</b> TML 433SLH, DL 868 SLH, XT 868 SLH, XT 433 SLH, T 868 SLH, T 433 SLH, XT 868 SLH BLACK, XT 433 SLH BLACK		<b>O&amp;O</b> TX, T.COM R4-2, T.COM R8-2, TWIN, TX (NEO)		<b>VDS</b> ECO-R, TRQ P	
<b>APRIMATIC</b> TR, TM4, TXM		<b>FAC</b> XT 433 RC, TE433HG, XT4 433 RCBE		<b>PRASTEL</b> MTE, MPSTLE, MPSTP2E, TCE, BFOR, TRQ-P, SLIM-E			
<b>AVIDSEN</b> 104251, 104250, 104250 OLD, 104250 RED, 104257, 104350, 654250, TX4 114253		<b>FADINI</b> JUBI-SMALL, JUBI 433, DIVO 71/4		<b>PUJOL</b> TWIN, VARIO, VARIO MARS, VARIO OCEAN, NEO			
<b>BALLAN</b> FM400, FM400E		<b>GENIUS</b> AMIGO JA332-JA334 868, AMIGOLD 868, KILO 433 JLC, KILO 868 JLC		<b>RIB</b> LITHIO			
<b>BENINCA</b> TO, GO, WV, TWV, ROLLCODE, APPLES, LOT WCV, CUPIDO, TO, GO, QV, HAPPY VA		<b>GENIUS</b> BRAVO, ECHO		<b>ROPER</b> NEO			
<b>BENINCA</b> IO, TO, GO, VA		<b>GIBIDI</b> AU1600, AU1600 WOOD, AU1680, AU1680 WOOD, DOMINO, MAKO		<b>ROPER</b> GO ROPER, GO MINI ROPER			
<b>BFT</b> MITTO, MITTO M, MITTO RCB, MITTO A, TRC, GHIBLI, MURALE, KLEIO		<b>JCM</b> NEO, TWIN		<b>SABUTOM</b> BROOVER, BROSTAR			
<b>CARDIN</b> TRQ S449, TRQ S449 GREEN (PRECODE), TXQ S449, TXQ S449 GREEN, TRQ S486, TXQ S486, S437 TX, X-RADO		<b>JCM</b> GO, GO PORTIS, GO NORTON, GO MINI		<b>SEAV</b> BE HAPPY RS, BE SMART			
<b>CASALI</b> GENIUS/CASALI A252RC		<b>KBLUE</b> ETH-TEL01		<b>SECULUX</b> NEO			
<b>CHAMBERLAIN/LIFT MASTER/MOTOR LIFT</b> 953ESTD, 371LM, 971LM, 84330E, 94334CE, 94333E/94334E/94335E, 9747E, 1A5639-7 1A54771A6487, 132B2372, 94330EM- L/9333EM/94335EML, 84330EML/84333EM- L/84335EML, 8747EM		<b>KEY</b> 900TXB-42R, TXB 44R, SUB 44R		<b>SILVELOX</b> Mhz 2007, QUARZ SAW			
<b>CLEMSA</b> MUTANCODE, T, T-8, E-CODE N		<b>KING GATES</b> CLIPPER, STYLO		<b>SIMINOR</b> CV/XNL, MITTO			
<b>CLEMSA</b> Attenzione! Codice Fisso MASTERCODE MV		<b>KLING</b> KUA, KUA E, KUA S		<b>SIMINOR</b> SIM433			
<b>DASPI</b> ZERO RC		<b>LABEL</b> SPYCO		<b>SOMFY</b> K-EASY, K-EASY NEW, K-EASY OLD, MITTO, KEY GO RTS, TELIS RTS, KEYTIS RTS, KEYTIS RTS NS, ALARMA			
<b>DEA SYSTEM</b> PUNTO 278, GOLDR, GENIE R 273, GENIE R-GT2M, MIO TR, GT2M, TRN		<b>MHOUSE</b> TX3, TX4, GTX4		<b>SOMMER</b> 4010, 4011, 4014 TX03-434-2, 4013 TX03-434-4, 4020 TX03-868-4, 4026 TX03-868-2, 4022 TX02-434-2, 4025 TX02-868-2, 4031 TX08-868-4			
		<b>MOOV</b> MT4G					

**WHY SYNC TECHNOLOGY**

Close to the automation and before using the original remote control, press and hold pressed the button on the WHY EVO remote control until the LED starts to flash. Wait for the end of the flashing.

**ACT ON THE RECEIVER**

Close to the automation and before using the original remote control, press and hold pressed the PRG or PGM button in the receiver, then press the button of WHY EVO remote control.

**DIRECT FUNCTIONING**

Close to the automation and before using the original remote control, press the button of WHY EVO remote control for 4/5 times.