



ISTRUZIONI DI MONTAGGIO
MONTAGEANLEITUNG
INSTALLATION INSTRUCTIONS
INSTRUCTIONS DE MONTAGE
INSTRUCCIONES PARA EL MONTAJE
INSTRUÇÕES PARA MONTAGEM

08065 - 08067 - 08085 - 08087 - 08088

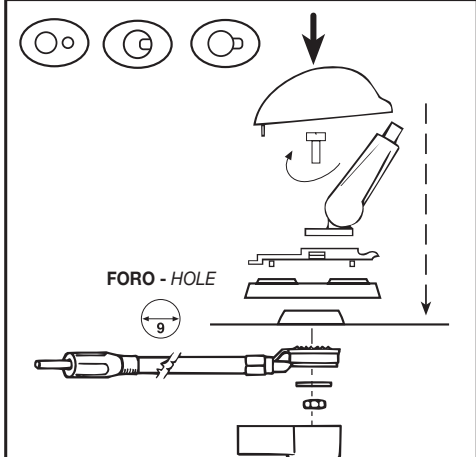


ALFA 90 >'01 - FIAT >'03 - LANCIA 96 >'03
 FIAT PUNTO - DOBLÓ - PALIO base
 LANCIA Y base >'03

08009 - 08089 - 08061

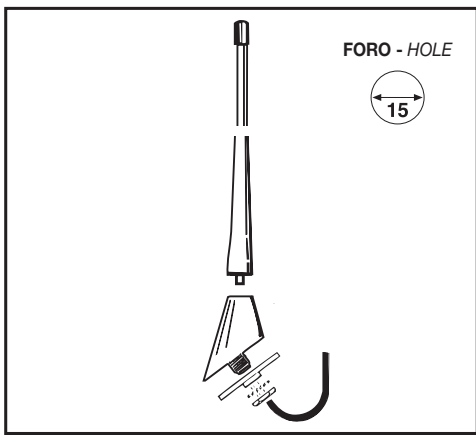


08009 Guadagno / Gain FM 10 dB - AM 16 dB


08002

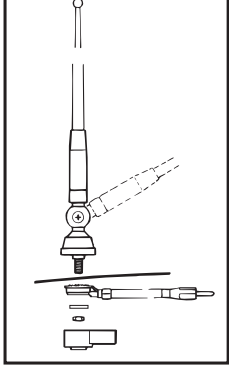


08023 - 08028

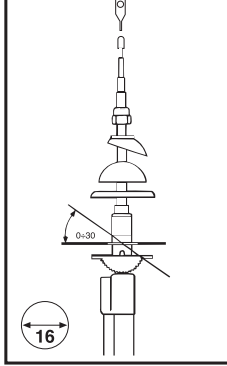

08075

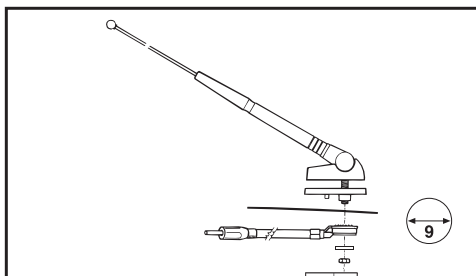

08060

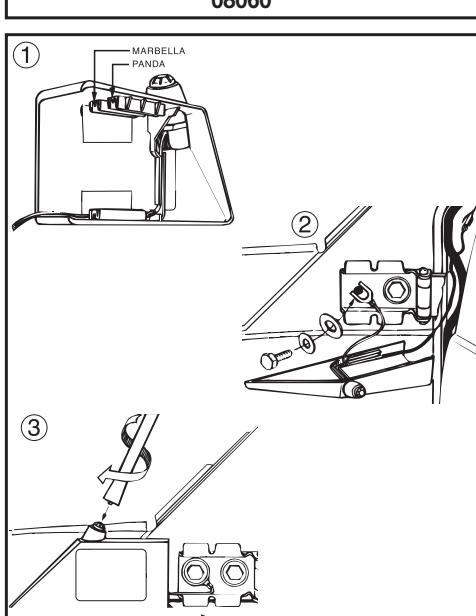

MADE IN ITALY

Phonocar

Via F.lli Cervi, 167/C
 42124 Reggio Emilia (Italy)